

USING YOUR SKY+ REMOTE CONTROL

Your Sky+ remote control is compatible with your Sky+ box and with most TV sets. All you have to do is set up the remote control to work with your particular equipment. Please read this guide carefully to make sure the setup is done properly and that you are getting the most out of your remote control.

FIRST THINGS FIRST

The remote control runs on 2 AA batteries. To insert or replace the batteries, follow these steps:

- 1) Push the catch on the battery cover upwards and pull the dark cover off the main part.
- 2) Carefully remove the old batteries (if applicable) then insert the new batteries, matching the + and - signs.
- 3) Once the batteries are in, put the cover back on, making sure the catch clicks into place.

When you're using the remote control, make sure:

- you point it straight at the Sky+ box (or TV);
- there's nothing blocking the infrared receiver on the Sky+ box (or TV).



IMPORTANT NOTES ON THE BATTERIES

- When the batteries are low, Sky Guide shows you a message onscreen. Replace the batteries as soon as you see the message.
- If you leave your remote control without working batteries for longer than 10 minutes, the TV compatibility settings are lost. After replacing the batteries you can control your Sky+ box as usual but you have to set it up to work with your TV, as described in this leaflet.
- Don't leave flat batteries in your remote control.
- Always replace both batteries at the same time; don't mix old and new batteries or mix different battery types.
- When you throw away old batteries, make sure they go to an environmentally-friendly collection point.

MAKE YOUR REMOTE CONTROL LAST LONGER

- Don't drop it!
- Don't let it come into contact with any liquids!
- Use a dry cloth to clean it!

IF YOU HAVE ANY PROBLEMS

For more information or troubleshooting tips, refer to:

- your Sky+ box user guide;
- the **Sky Accessory** pages of sky.com, see **Related Links**;
- the tips on your Sky Guide (*Interactive > Sky Customer Service > My Sky* or use **tv guide** on your Sky+ box).

Otherwise, call us on the number shown on Sky Guide (**services > Telephone Numbers > Technical Help** or use **tv guide** on your Sky+ box).

INTERACTIVE GUIDE

Move the mouse over the remote control to find out what each button does.



PRINTABLE GUIDE

To print this page, go to **File > Print** and select the page.

Sky • set your remote to control your Sky+ box

tv • set your remote to control your TV

box office • show Box Office programmes

tv guide • check out TV listings

mute • turn your TV's sound on and off

vol + and - • change your TV's volume

arrows • use when watching TV to see what's on other channels or to highlight onscreen options

text • switch to text mode

rewind • rewind live TV or when playing back a recorded programme

pause • pause live tv or while playing back a recorded programme

record • press to record the current programme or set a recording up to 7 days in advance

colours • use to select a variety of onscreen options



standby • turn your Sky+ box (or TV) on and off

services • set up a range of features including parental controls, subtitles and favourite channels

interactive • press for interactive services

i • get more information on what you're watching or on a highlighted programme

ch + and - • change the channel

select • confirm a menu option

back up • jump back to previous page

help • show help on using Sky Guide

play • start playing a recorded programme

stop • stop playing back a recorded programme

numbers • enter channel numbers or select menu options

0 / speaker • press before entering a radio channel number

SETTING UP THE REMOTE CONTROL TO WORK WITH YOUR TV

If your TV is made by Sony then your remote control is already set up for your TV set as well as your Sky+ box. If you have a different brand of TV, you'll have to change the settings, as follows:

- 1) Turn on your TV and Sky+ box.
- 2) Find your TV's brand code. [Click here to show the brand code list.](#)
If you can't find the brand, press **interactive** on the remote control, go to *Sky Customer Service* and the *Technical Assistance* pages where you'll find a more detailed list. Write the number here: ____
- 3) Press **tv** on your Sky remote control.
- 4) Hold down **select** and the **red** key together for about 2 seconds until the light on your remote control flashes twice.
- 5) Press **tv** again.
- 6) Key in the 4-digit code of your TV brand.
The light on your remote control flashes twice.
If you see it flash only once, check you've got the right code and enter it again.
- 7) Press the **standby** key on your remote control.
If the TV switches off, press **select**.
The light on your remote control flashes twice.
If the TV doesn't switch off, press **tv** then **standby**. Keep doing this (press **tv** then **standby**) until the TV turns off, then press **select**.

The settings are done and your Sky remote control should now work with your TV.

To go back to the factory settings, press **tv** then hold down **select** and the red key together for about 2 seconds until the red light on the remote control flashes twice. Then key in the sequence **9-8-1**.

TV SETUP CODES

Aiwa	0406	Fidelity	0294	Memorex	0037	Salora	0651
Akai	0098	Finlandia	0296	Metz	0491	Samsung	0060
Akura	0042	Finlux	0297	Minoka	0921	Sanyo	0159
Alba	0043	Fisher	0154	Mitsubishi	0150	Schneider	0665
Amstrad	0063	Funai	0179	NEI	0514	Seleco	0672
Baird	0117	Genexxa	0330	Nikkai	0528	Sharp	0093
Bang & Olufsen	0118	Goldstar	0056	Nokia	0536	Siemens	0680
BPL	0115	Goodmans	0335	Nordmende	0537	Sony	0000
Beko	0125	Granada	0340	Orion	0549	Soundwave	0702
Beon	0899	Grundig	0345	Panasonic	0051	Tandy	0741
Brionvega	0147	Harwood	0361	Philips	0081	Tatung	0049
Bush	0157	Hinari	0365	Pioneer	0166	Technics	0250
Crown	0225	Hitachi	0145	Protech	0595	Telefunken	0757
Daewoo	0092	ITT	0384	Pye	0600	Thomson	0771
Decca	0244	JVC	0053	Roadstar	0625	Thorn	0772
Dual	0257	Loewe	0442	Saba	0645	Thorn-Ferguson	0936
Ferguson	0293	Matsui	0477	Saisho	0649	Toshiba	0156

[Click here to go back to the steps](#)